


INSTALLATION INSTRUCTIONS

Yamaha Viking Lift Kit

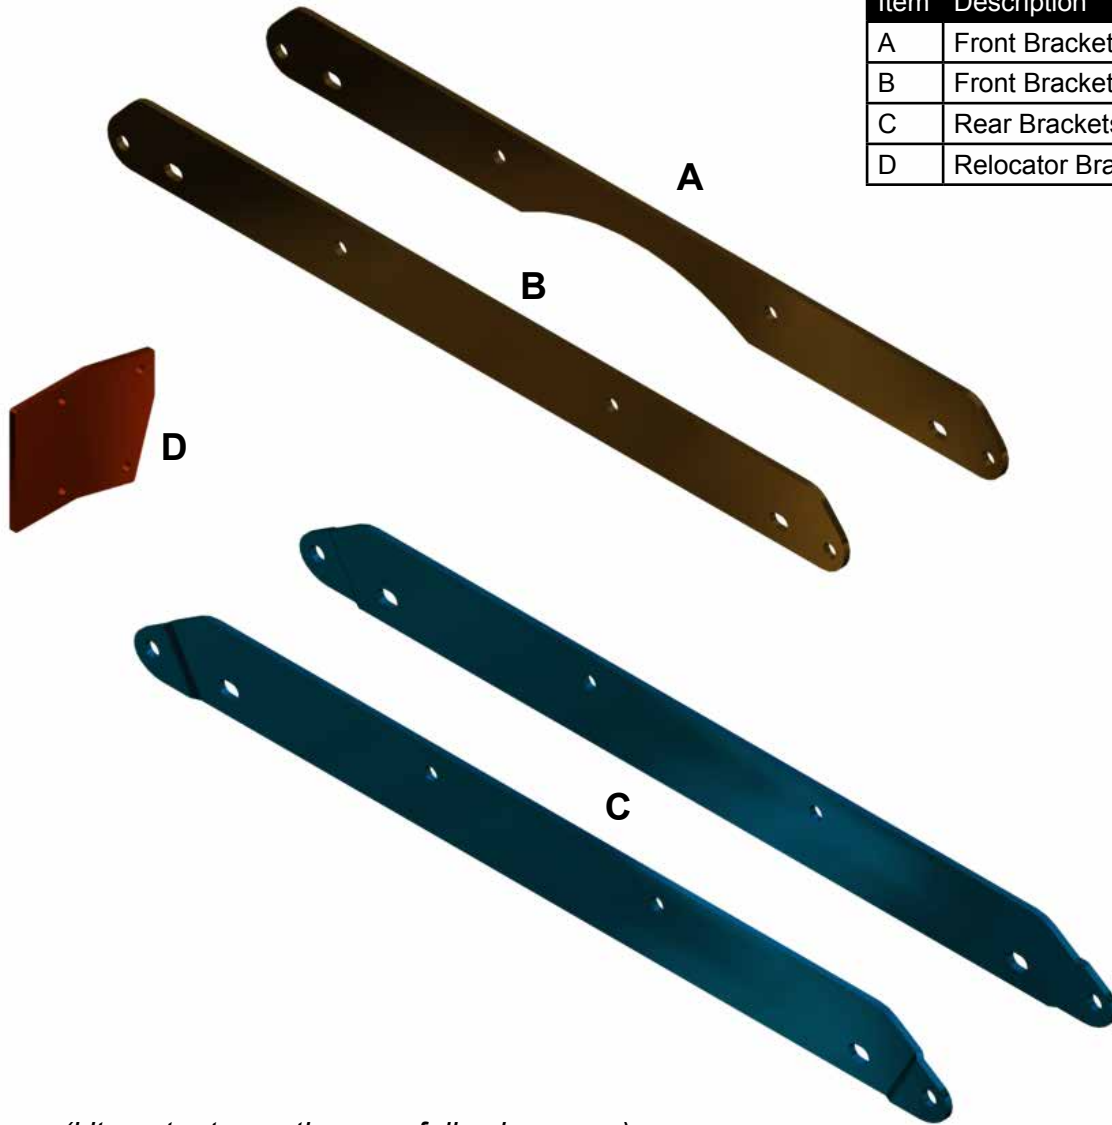

Item	Description	Qty
A	Front Bracket Fore	1
B	Front Bracket Aft	1
C	Rear Brackets	2
D	Relocator Bracket	1

(kit contents continue on following page)

Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

*Thank You
For Choosing*



Liability Statement

SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.

 
Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.

(kit contents continued)


Short Spacer
Qty (4)



Long Spacer
Qty (4)




Qty (2)

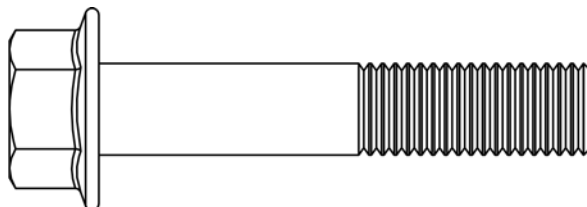


M12-1.75 x 65mm Lg. FHCS

Qty (6)

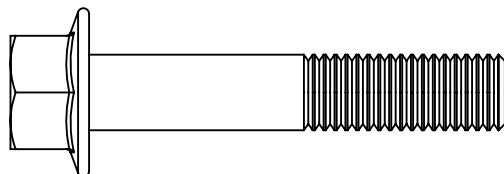



M10-1.50 x 55mm Lg. FHCS

Qty (2)

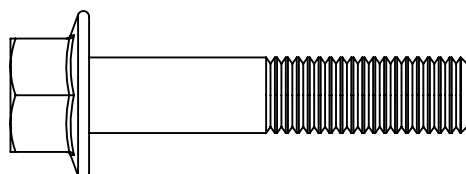


M10-1.50 x 50mm Lg. FHCS

  M6-1.0 x 30mm Lg. FHCS
Qty (2)




M6 Nylock Nut
Qty (2)

M12 Nylock Nut

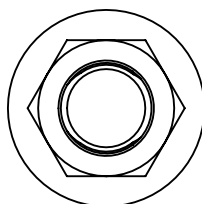

Qty (2)

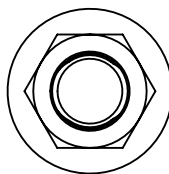

M10 Nylock Nut

Qty (8)

FRONT:




Keep all components removed from machine.

Do not tighten hardware completely unless noted.

1. Remove Wheels and Shocks.
2. Remove Rectifier and Ground Wires. See Fig. 1.
 - Install Rectifier to Relocator Bracket (D) with M6-1.0 x 30mm Lg. FHCS and M6-1.0 Nylock Nuts. See Fig. 1a.
 - Install assembly and ground wires to stock location with stock hardware. See Fig. 1a.
3. Install Front Brackets (A)(B) and Short Spacers to stock Shock Mounts. See Figs. 2 - 2b.
 - Front Bracket Fore (A) installs to inside and Front Bracket Aft (B) installs to outside.
 - Secure with M10-1.50 x 55mm Lg. FHCS and M10-1.50 Nylock Nuts.
 - Reinstall Shocks with M10-1.50 x 55mm Lg. FHCS and M10-1.50 Nylock Nuts..
4. Tighten all hardware completely.



(illustrations on following pages)

Front

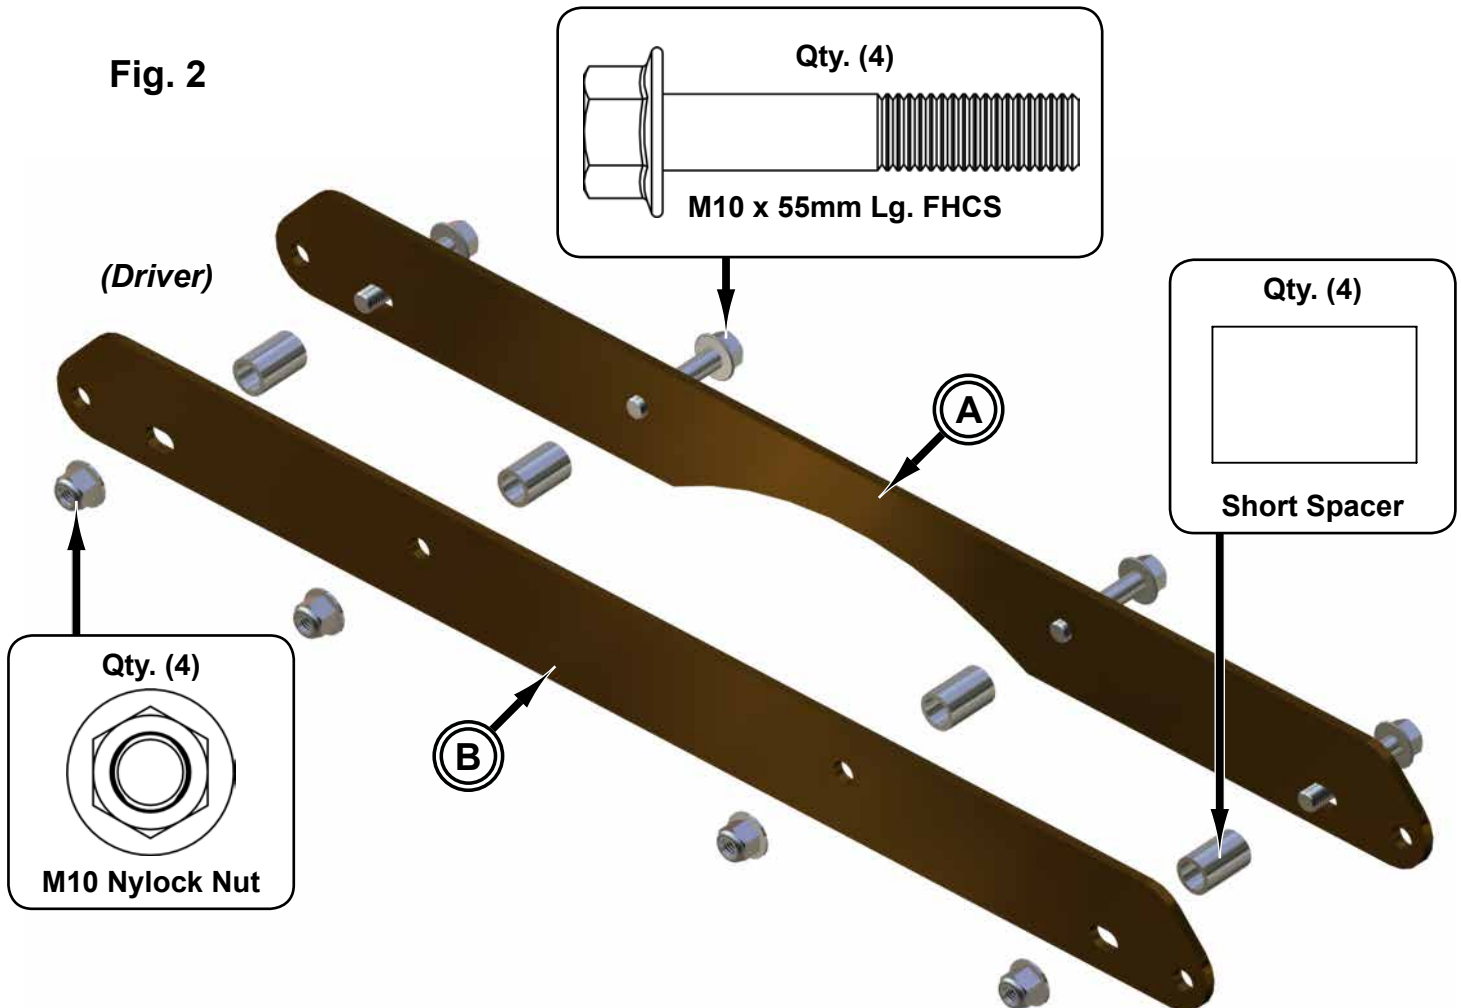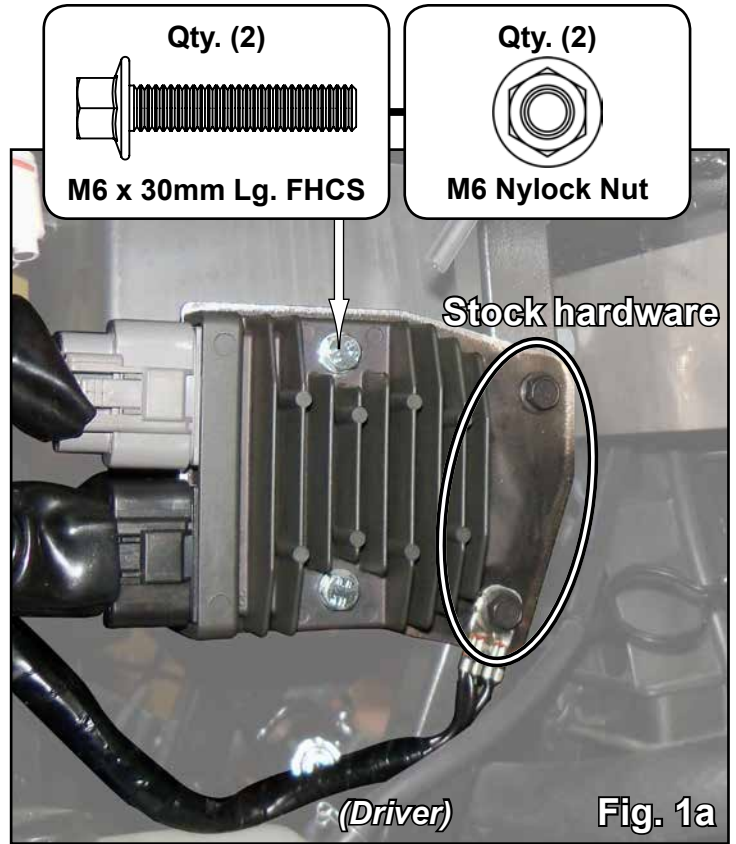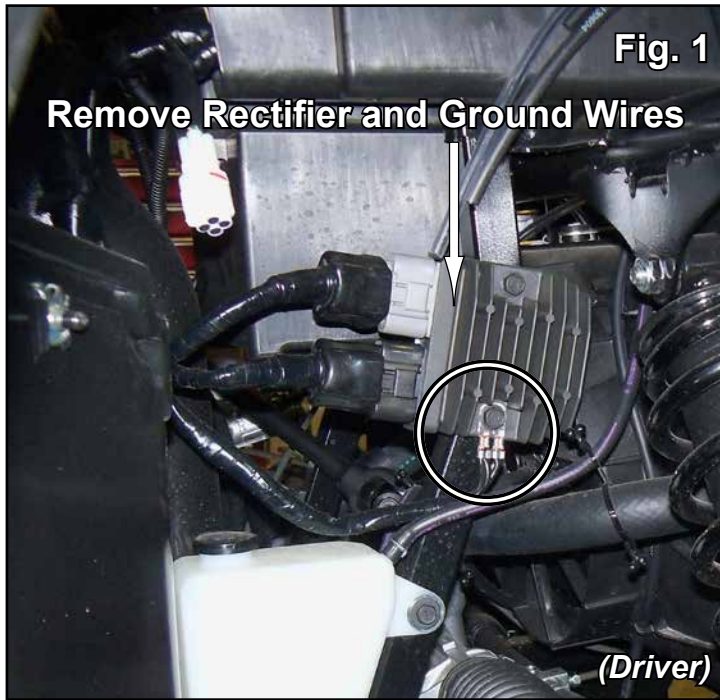

(illustrations on following pages)

(illustrations continued)

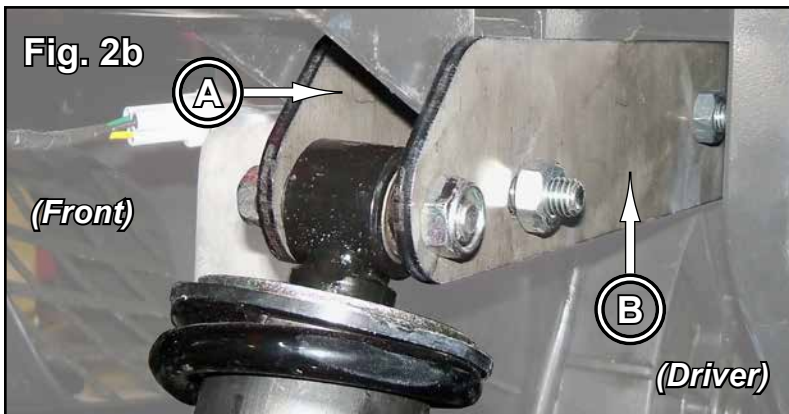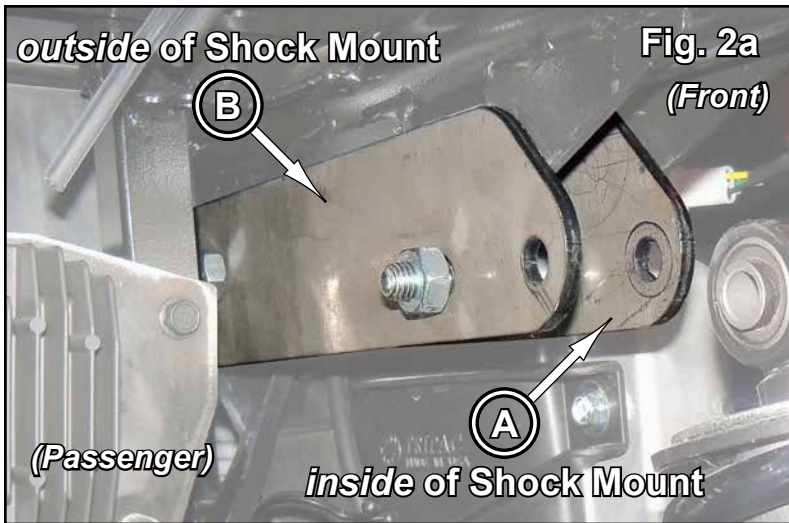

REAR:

Keep all components removed from machine.

Do not tighten hardware completely unless noted.

1. Remove Wheels and Shocks.
2. Install Rear Brackets (C) and Long Spacers to inside of stock Shock Mounts. See Figs. 3 - 3a.
 - Use M10-1.50 x 50mm Lg. FHCS and M10-1.50 Nylock Nuts on inner holes of Rear Brackets (C).
 - Use stock hardware and Long Spacers on remaining holes in Rear Brackets (C).
 - Reinstall Shocks with M12-1.75 x 65mm Lg. FHCS and M12-1.75 Nylock Nuts.
3. Tighten all hardware completely.

(illustrations on following pages)

