


INSTALLATION INSTRUCTIONS

Polaris RZRXP, Winch Mount Plate

Item	Description	Qty
Α	M8-1.25 x 30mm Lg. HHCS	2
В	M10-1.50 x 25mm Lg. HHCS	2
С	M8-1.25 Nylock Nuts	4
D	M10-1.50 Nylock Nuts	2
Е	M8 Washers	4
F	M10 Washers	2
G	Winch Mount Plate	1
Н	Fairlead Plate	1
J	M8-1.25 x 25mm Lg. HHCS	2





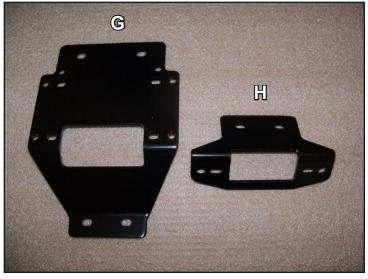

Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th 8:00am - 7:00pm EST Friday

9:00am - 2:00pm EST Saturday

Thank You For Choosing

Liability Statement

SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.


Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warrantied if item was not installed properly, misused, or modified.

Do not tighten hardware completely unless noted.

- 1. Remove Access Panel. See Fig. 1.
- 2. Assemble Fairlead Plate (H) to Fairlead (included with Winch) using M8-1.25 x 25mm Lg. HHCS (J), M8 Flat Washers (E), and M8-1.25 Nylock Nuts (C). See Fig. 2.
- Insert Winch Mount Plate and secure to frame using M10-1.50 x 25mm Lg. HHCS (B), M10 Flat Washers (F), and M10-1.50 Nylock Nuts (D). See Fig. 3.
- Install Fairlead Plate Assembly to frame and Winch Mount Plate (G). Winch Mount Plate will rest on top of frame and Fairlead Plate Assembly. Secure using M8-1.25 x 30mm Lg. HHCS (A), M8 Flat Washers (E), and M8-1.25 Nylock Nuts (C). See Fig. 4.
- 5. Tighten all hardware completely.

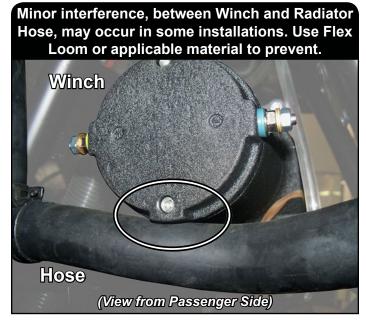

PARTS REFERENCE

Item	Description
Α	M8-1.25 x 30mm Lg. HHCS
В	M10-1.50 x 25mm Lg. HHCS
С	M8-1.25 Nylock Nuts
D	M10-1.50 Nylock Nuts
Е	M8 Washers
F	M10 Washers
G	Winch Mount Plate
Н	Fairlead Plate
J	M8-1.25 x 25mm Lg. HHCS





