



## INSTALLATION INSTRUCTIONS Polaris RZRS/RZR4 5" Lift Kit (Dual Exhaust)

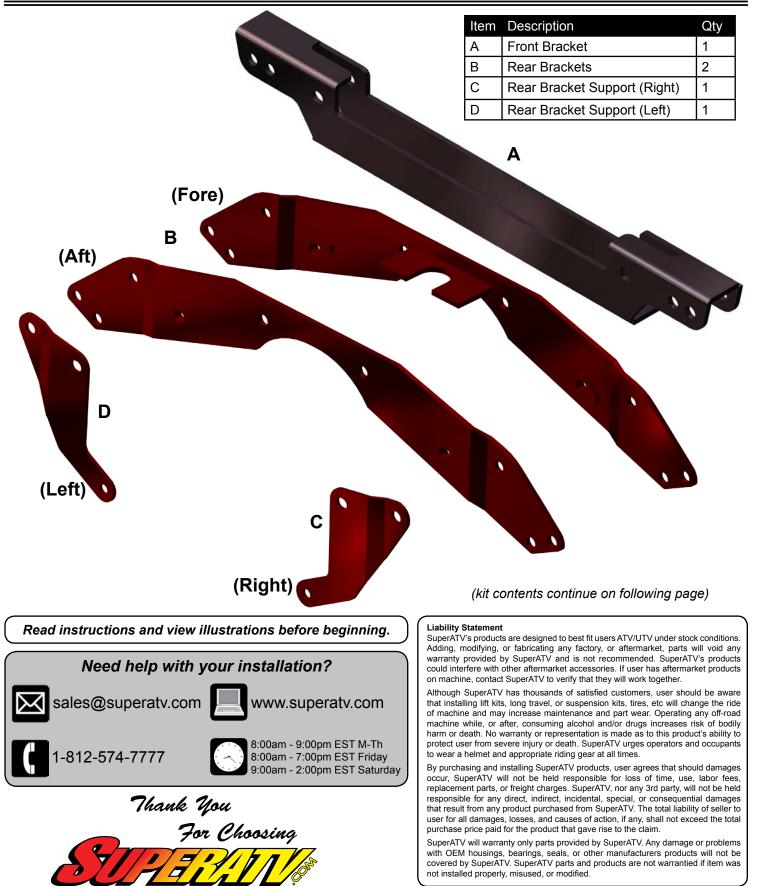


© 2012 SuperATV.com. All Rights Reserved.

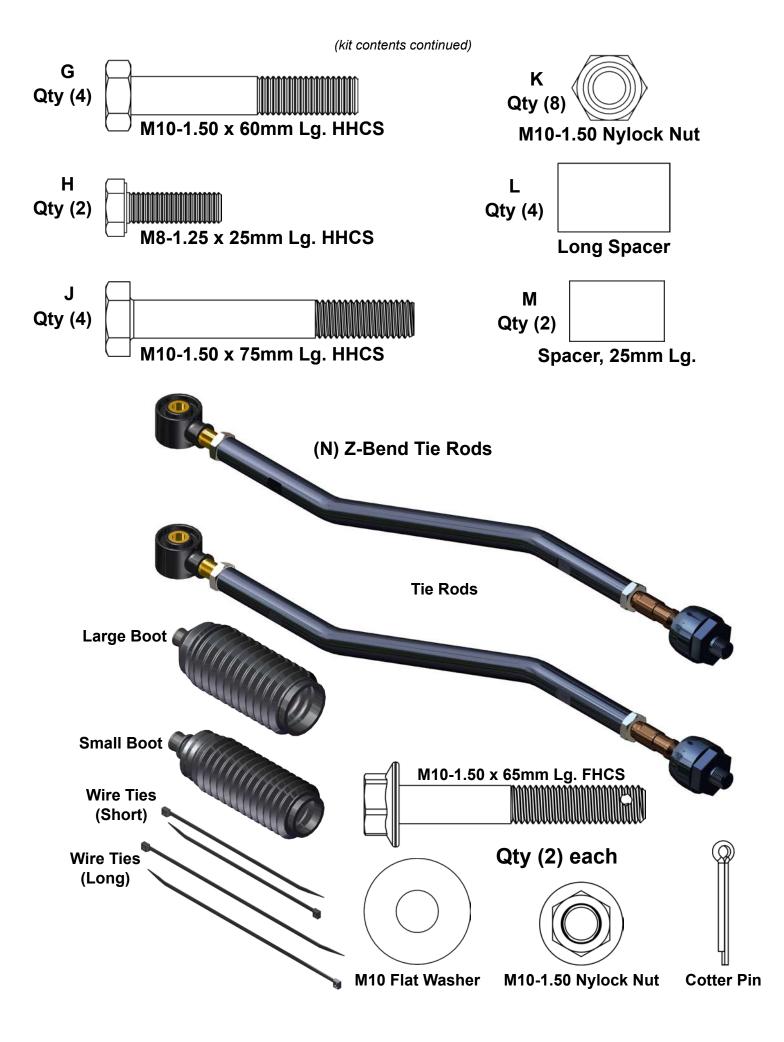


Keep all components removed from machine. Do not tighten hardware completely unless noted.


## **FRONT:** Refer to Front Assembly illustrations, page 4.

- 1. Raise front of machine off ground, secure with jack stands, and remove Wheels. Remove Shocks from Frame. Reroute Differential Vent Tube as shown in Fig. 1.
- 2. Install Front Bracket (A) to machine and secure with M10-1.50 x 60mm Lg. HHCS (G), M10-1.50 Nylock Nuts (K), and Spacers, 25mm Lg. (M).
- 3. Install Z-Bend Tie Rods (N). See Page 5.
- When installing to machine, Tie Rod Ends will install to **bottom side** of Spindles.
- 4. If Axles are included with kit, install at this time.
- 5. Install Shocks to Front Bracket (A) with stock hardware.
- 6. Tighten hardware completely and reinstall Wheels.

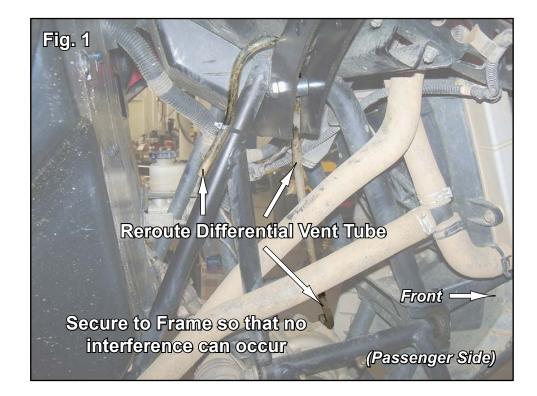

(illustrations continue on following pages)

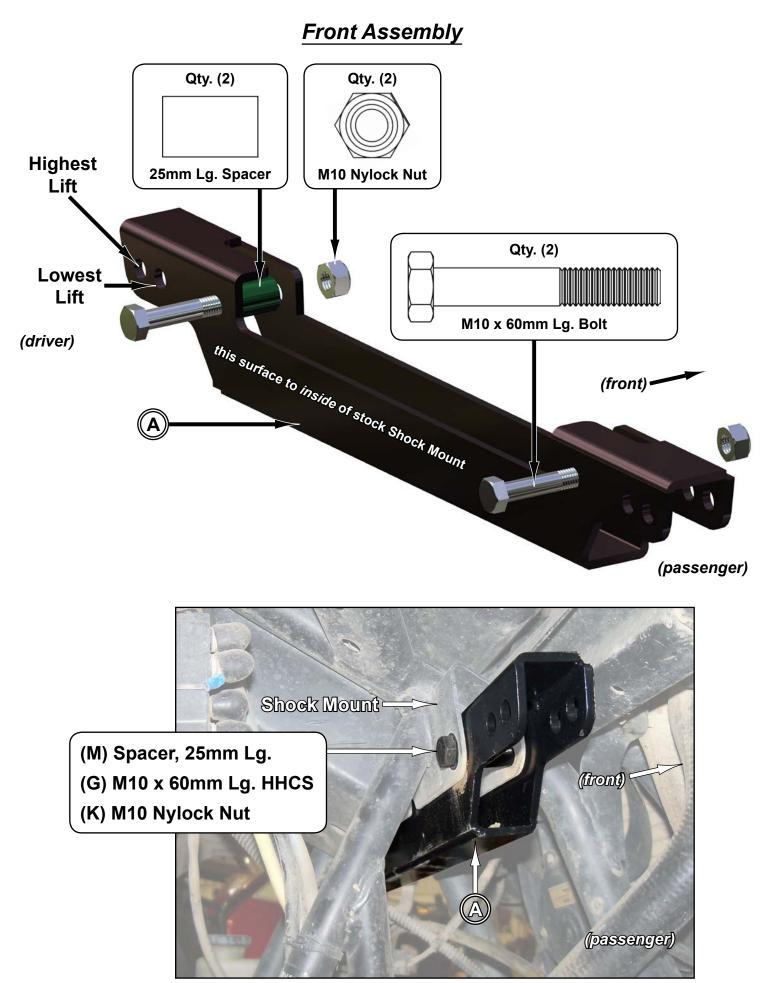


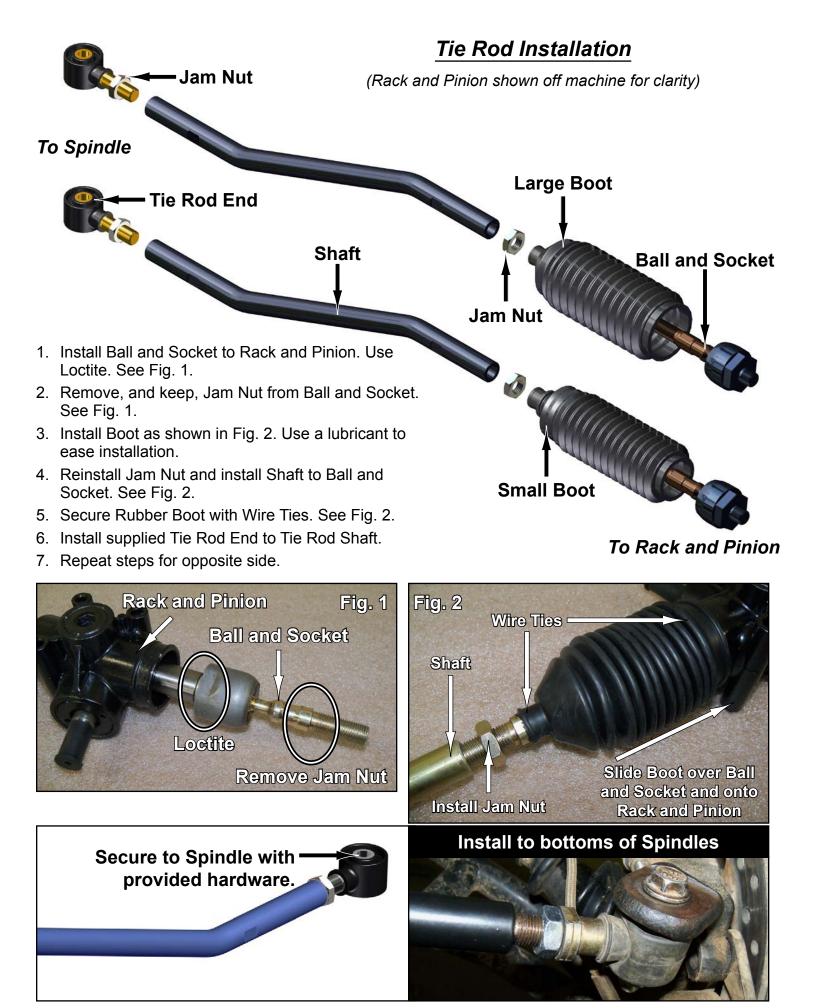

Keep all components removed from machine. Do not tighten hardware completely unless noted.

**REAR:** Refer to Rear Spacer Locations and Rear Assembly illustrations, pages 6 - 7.

- 1. Raise rear of machine off ground, secure with jack stands, and remove Wheels. Remove Shocks from Frame.
- 2. Remove (2) Bolts from factory Braces. See Fig. 2.
- 3. Install Rear Brackets (B) to Frame with Long Spacers (L) between Brackets;
- Secure Rear Brackets (B) and Long Spacers (L) with M10-1.50 x 60mm Lg. HHCS (G) and M10-1.50 Nylock Nuts (K).
- Install M10-1.50 x 75mm Lg. HHCS (J); Do not add Nylock Nuts (K).
- Install Rear Support Brackets (C) (D) to Rear Bracket (B) and onto M10-1.50 x 75mm Lg. HHCS (J). Secure with M10-1.50 Nylock Nuts (K).
- 5. Use factory holes, in Frame, and secure Rear Support Brackets (C)(D) with stock hardware or M8-1.25 x 25mm Lg. HHCS (H).
- 6. If Axles are included with kit, install at this time.
- 7. Install Shocks to Rear Brackets (B) with stock hardware.
- 8. Tighten hardware completely and reinstall Wheels.

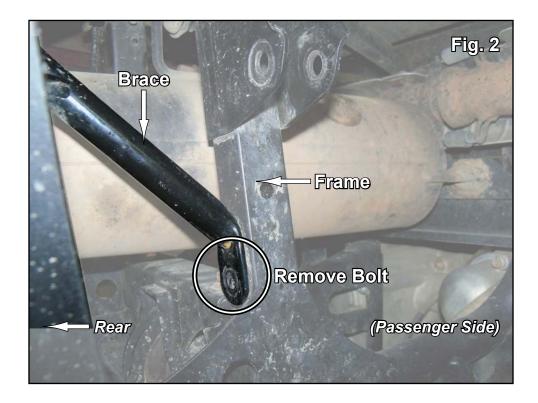

(illustrations continue on following pages)

