
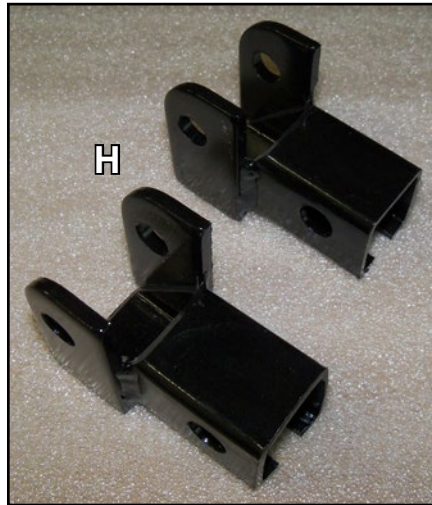


**2009 and up models will require Wheel Spacers, sold separately.**

Item	Description	Qty
A	M8-1.25 x 25mm Lg. HHCS	2
B	M8-1.25 x 35mm Lg. HHCS	4
C	M10-1.50 x 55mm Lg. HHCS	6
D	M8-1.25 Nylock Nuts	6
E	M10-1.50 Nylock Nuts	12
F	M8 Flat Washers	4
G	M10 Flat Washers	8
H	Front Shock Mount Brackets	2
J	Rear Shock Mount Brackets	4
K	Sway Bar Spacers	2
L	Spacers	2

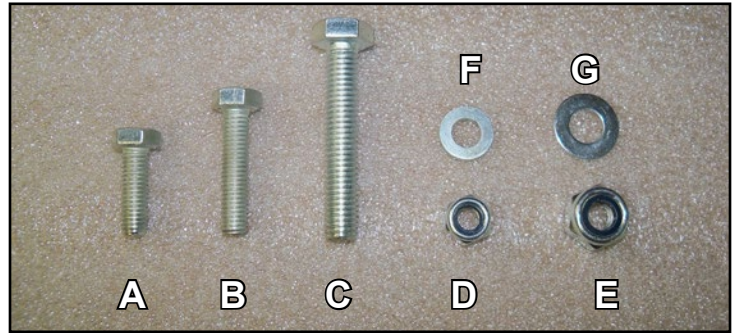

**Read instructions and view illustrations before beginning.**

**Need help with your installation?**



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th  
8:00am - 7:00pm EST Friday  
9:00am - 2:00pm EST Saturday

*Thank You  
For Choosing*

**Liability Statement**

SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.



Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.

## FRONT

1. Raise front of machine off ground, secure with jack stands, and remove Wheels. Remove Top Shock Bolts. Keep for reuse.
2. Locate hole in frame and install (1) each M8-1.25 x 25mm Lg. HHCS (A), M8 Flat Washer (F), and M8-1.25 Nylock Nut (D). See Fig. 1 and Fig. 2.
3. Install Front Bracket (H) to machine as shown. Ensure that Washer (F) is *under* Front Bracket (H). Install M10-1.50 x 55mm Lg. HHCS (C) and M10-1.5 Nylock Nut (E). See Fig. 3 and Fig. 3a. **Optional; (2) M10 Flat Washers (G).**
4. Reinstall Shock using stock hardware.
5. Tighten hardware completely and repeat steps for opposite side.
6. Reinstall Wheels.

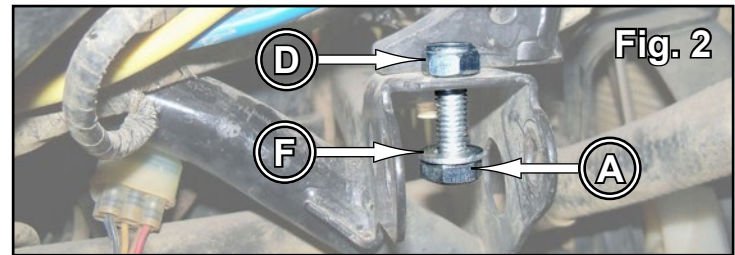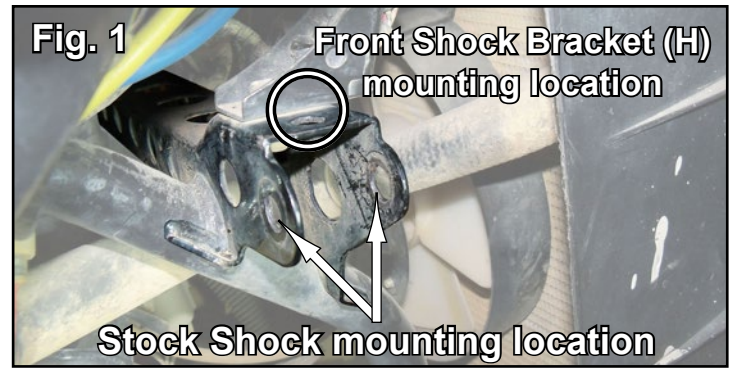

## REAR

1. Raise rear of machine off ground, secure with jack stands, and remove Wheels. Remove Bottom Shock Bolts.
2. Install (2) Rear Shock Mount Brackets (J) to A-Arm and secure with M10-1.50 x 55mm Lg. HHCS (C), M10-1.50 Nylock Nut (E), (2) M10 Flat Washers (G), and Spacer (L). Mount to *outside* of stock Bracket on A-Arm. See Fig. 4.
3. Reinstall Shock using M10-1.50 x 55mm Lg. HHCS (C), M10-1.50 Nylock Nut (E), and (2) M10 Flat Washers (G).
4. Install Sway Bar Spacer (K), under Sway Bar Mount, using (2) M8-1.25 x 35mm Lg. HHCS (B), M8 Flat Washers (F), and M8-1.25 Nylock Nuts (D). See Fig. 5.
5. Tighten *all* hardware completely and repeat steps for opposite side.
6. Reinstall Wheels.

